SPA-QUIP

5250//



Liser's Guide

Model: SP601-15, 15T, 20, 20T




^ -	4	1
	nto	nte
	nte	บบ

Section		Page
1	SP601 Touch Pads	Pg 1
2	Temperature Control	Pg 2
2.1	- Adjusting Set Temperature	Pg 2
2.2	- Non Default Display Value	
2.3	- Heating Mode Selection(24hr circulation pump not fitted)	
3	Pump Operation.	
3.1	- Pump 1 (Single speed pump, no 24hr circulation pump fitted)	
3.2	- Pump 1 (Single speed pump, 24hr circulation pump fitted)	
3.3	- Pump 1 (Two speed pump,no 24hr circulation pump fitted)	
3.4	- Pump 1 (Two speed pump, 24hr circulation pump fitted)	
4	Auxiliary/Air Button	•
4.1	- Adjustable Speed Mode(SPVSB only)	
5		
5.1	- Adjustable Colour Mode(SPVCL only	Pg 6
5.2	- IndicatorLlight	() Pg 6
6	Light Operation - Adjustable Colour Mode(SPVCL only IndicatorLlight Auto Sanitisation No 24hr Circulation Pump Fitted Adjusting Minimum Filtration Clean Up Cycle 24hr Circulation Pump Fitted My Spa Is Too Hot In Summer. Sleep Timer To Set Current Time And Day To Set Programs) Pg 7
6.1	- No 24hr Circulation Pump Fitted	Pg 7
6.1.1	- Adjusting Minimum Filtration	Pg 7
6.1.2	- Clean Up Cycle	Pg 7
6.2	- 24hr Circulation Pump Fitted	Pg 7
6.3	- My Spa Is Too Hot In Summer	Pg 7
7	Sleep Timer	Pg 8
7.1	- To Set Current Time And Day	Pg 8
7.2	- To Set Programs	Pg 8
8	Self Diagnostic Error Codes	Pg 9
SP	Auto Sanitisation - No 24hr Circulation Pump Fitted - Adjusting Minimum Filtration - Clean Up Cycle - 24hr Circulation Pump Fitted - My Spa Is Too Hot In Summer Sleep Timer - To Set Current Time And Day - To Set Programs Self Diagnostic Error Codes Self Diagnostic Error Codes	

Congratulations on choosing the latest Spa Power 601 control system. This controller makes use of the latest technology, including innovative optical and digital sensor designs. The greater variety of optional accessories, user-friendly touchpad and reliable components provide you with the most sophisticated controller in its class.

1 SP601 Touch Pads

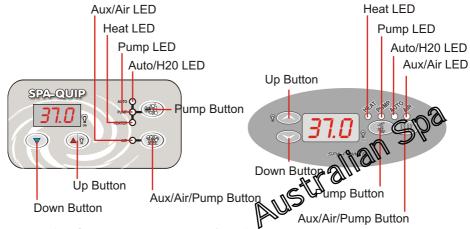

- Auto LED (No 24hr circulation pump fitted)
- The yellow or blue Auto indicator light will appear on the touch pad whenever the system is in full automatic control mode. In this model is system automatically activates the pump and heater to filter the water and maintain these? water programmer at the light is flashing the water sensor is not detecting any water.
- H20 LED (24h Carculation pump fitted)
- The yell and use H20 light indicates if water is present in the heater. If no water is detected then the will flash and the unit will not operate except to run the circulation pump to try to get water heater. If no water reaches the heater for one minute then an H20 error will occur. If this happens then pushing the pump button will run the circulation pump for another minute.
- Pump LED

The green Pump indicator light will appear on the touch pad whenever the pump is running, in both auto and manual use mode. If this light is flashing, the spa is in Sleep Mode.

Heat LED

The red Heater indicator light will appear on the touchpad whenever the heater element is on, in both auto and manual use mode. For safety the heater is always automatically controlled. Usually switching on the air blower accessory will cause the heater to switch off (loadshedding). This is in order to keep the total power load to a safe level. If this light is flashing the system has an error (see section 8).

Aux/Air LED

The Aux/Air indicator LED will appear on the touchpad whenever the Aux/Air button is pushed and conversly will disapear when the button is pushed again. Note: If the spa does not have a load connected to the controller the LED will still operate as described above.

Page 1

2 Temperature Control

The Spa Power 601 automatically controls the pump and heater to filter the water and maintain it at the desired temperature set by the user (see below). The user can leave the system to look after the spa and know it will be at the correct temperature whenever he or she wants to use it.

2.1 Adjusting Set Temperature

The Spa Power 601 gives the user direct control of the pool temperature from the poolside control panel. Holding down the Up or Down button will adjust the temperature set point as shown on the digital readout. There is a slight delay before the buttons operate to reduce the risk of accidental adjustment. The pool temperature will be maintained very close to the set temperature.



UP Increase the set temperature by 0.5°C per beep (Max = 41.5°C)



DOWN Decrease the set temperature by 0.5° C per beep (Min = 10.0° C)



The display normally shows the temperature set point, unless the optional in pool temperature sensor is fitted in which case the sensed water temperature is displayed. In either case the temperature point will be displayed while being adjusted as described above.

2.2 Non-Default Display Value

The non-default display value (either sensed water temperature or temperature set point) can be checked if necessary by pressing the Up & Down button

 
2.3 Heating Mode Selection (24hr & Coump not fitted)

 
In addition to the temperature wing the user can select the preferred heating mode. The two available heating modes are...

1/ Demand Head displayed as Ht.d). This is the default setting in which the pump and heater will come on automatic denever the temperature drops slightly below the set point.

2/ Heating (displayed as Ht.F). In this mode the pump and heater will come on automatically no more than per hour to filter and heat the water. This mode is provided as an option for those who prefer to limit the natural cycling of the system.

To select the heating mode first press the Pump and Down buttons simultaneously to display the current heating mode, then press and hold the Up or Down buttons to change modes.





SPA-QUIP

s both buttons ultaneously


3 Pump Operation

There are four possible variations of pump 1 that may have been fitted to your spa, this user guide covers all variations of pump 1 that could have been fitted. Please read sections 3.1 through to 3.4 then follow the section which matches your spa operation.

Note: Even if a 24hr circulation pump is fitted there is no button to control it. The 24hr circulation pump operation is completely automatic, It only turns off in sleep mode (if optional time clock is fitted) or in an error condition.

3.1 Pump 1 (Single speed pump, no 24hr circulation pump fitted)

Pump 1 is controlled by just one touch pad button pushing the pump button three times cycles its operation through three modes Automatic, Manual and Standby. When the spa is running in automatic mode, pressing the pump button will deactivate auto mode and set the pump running in Manual Mode. The auto LED is orange when auto mode is enabled and off when in Manual Mode. When the pump is in standby mode all indicator LED's are off.

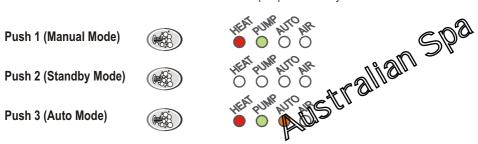

Notes:

- 1) If Pump 1 is left in "Manual or "Standby" modes it will automatically revert to "Auto" mode after 90 minutes.
- 2) There is no direct user control over the The health and come on automatically whenever Pump 1 is on.

3.2 Pump 1 (Single peed pump, 24hr circulation pump fitted)




Notes:

- 1) If Pump 1 is left on, it will automatically switch off after 20 minutes.
- 2) There is no direct user control over the heater. The heater may come on automatically whenever the 24hr circulation pump is on.
- 3) If the heater element is on, running the pump may cause the heater to load shed and switch off. If this occurs the heater will come back on approximately 5 seconds after the pump is deselected.

3.3 Pump 1 (Two speed, no 24HR circulation pump fitted)


Pump 1 is controlled by just one touch pad button pushing the pump button 4 times cycles its operation through 4 modes Automatic, Manual Low Speed, Manual High Speed and Standby. When the spa is running in automatic mode, pressing the pump 1 button will deactivate auto mode and set the pump running in Manual low speed. The auto LED is orange when auto mode is enabled and off when in manual low speed or manual high speed. When the pump is in standby mode all indicator LED's are off.

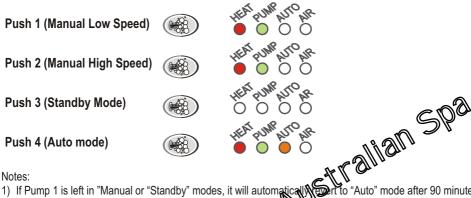

- 1) If Pump 1 is left in "Manual or "Standby" modes, it will automatically (2) to "Auto" mode after 90 minutes.
- 2) There is no direct user control over the heater. The heater makes on automatically whenever Pump 1 is on.
- 3) If the heater element is on, running the pump in high speed may cause the heater to load shed and switch off.

3.4 Pump 1 (Two spe ation pump fitted)

Pushing the pump button tre es cycles the pump through its two speeds then off. The pump LED is green when the pump is running in low or high speed and off when pump is off.

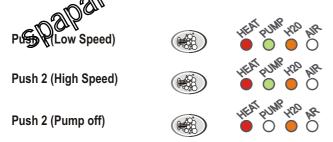

Notes:

- 1) If Pump 1 is left on, it will automatically switch off after 20 minutes.
- 2) There is no direct user control over the heater. The heater may come on automatically whenever the 24hr circulation pump is on.
- If the heater element is on, running the pump in high speed may cause the heater to load shed and switch off. If this occurs the heater will come back on approximately 5 seconds after the pump is deselected.

4 Auxiliary Air Button

The Air Button controls an auxiliary air blower. It is used to turn the blower on and off, and select different operating modes if a Spa Power Variable-Speed Blower (SPVSB) has been fitted. 2 pushes (STD) or 4 pushes (SPVSB) of the air button cycles the blower as follows:

Note: In some spas an additional jet pump or pool light etc may be fitted instead of a standard air blower.



Standard Air Blower (STD)

Push 1 - Blower ON

Push 2 - Blower OFF



Spa Power Variable-Speed Blower (SPVSB) (if fitted)

Push 1 - Blower ON (Full Speed)



Light

Push 2 - Blower ADJUSTABLE (Adjustable Speed)



Push 3 - Blower OSCILLATING (Oscillating Speed)





Note: If left on, this accessory may automatically switch off after 20 minutes. If the heater element is on, switching on this accessory may automate heater to loadshed and switch off. This is to keep the total power load to a safe level.

4. Adjustable Speed Mode (SPVSB only)

If a Spa Power Variable-Speed Blower is fitted, the spa user has the ability to adjust the blower speed to any desired setting. The Up and Down buttons are used to set the desired blower speed. Note: If the blower is in Full Speed or Oscillating modes then pushing the Up or Down button will put it into Adjustable Speed mode and then adjust the speed.

Step 1) Press Air Button twice to set Adjustable Speed Mode



Step 2) Press Up



to **increase** speed of blower

Step 3) Press Down(



to **decrease** speed of blower

5 Light Operation

Your spa may have been fitted with either of two different LED lights; a Spa Power Coloured Light (SPCL) or a Spa power Variable Coloured Light (SPVCL). The Spa Power Coloured Light is a single coloured light that is either on or off. The Spa Power Variable Coloured light is a light that has the ability to change between 12 different colours and white (see below for user instructions).

The multi-function Light Button () is used to turn the light on and off (SPCL) and select through the different operating modes of the Spa Power Variable Colour Light. Two short presses of the button will turn the Spa Power Coloured Light on and off or five short presses of the button will cycle the Spa Power Variable Coloured Light as follows:



Light Button

Push 3 - Light CYCLE SLOW (SPVCL Cycle through colours - slow)

Push 4 - Light CYCLE FAST (SPVCL Cycle through colours - slow)

Push 5 - Light OFF

Note: This is a multi-function buttor

- 1) Short presses of this button course the light functions as detailed above.
- 2) Holding this button will be not increase the set temperature of the spa.
- wanable Speed Blower is fitted and is turned on this button increases the blower speed. 3) When a Spa Row

dble Colour Mode (SPVCL only)

What is on, short presses of the Down button \(\nabla\) will put the light into adjustable colour mode and then sequentially select through all the available colours. The last colour set in this mode will be remembered the next time the light is used.

5.2 Indicator Light

A small red dot in the bottom corner of the digital readout indicates when the light is turned on. If left on the light will automatically switch off after 30 minutes.



 
6 Auto Sanitising (Filtration)

6.1 No 24hr Circulation Pump Fitted

The Spa Power 601 automatically maintains the filtration/sanitising of the spa pool water. The minimum amount of filtration time is programmable by the user and can be adjusted between 0 and 15 minutes per hour (0 to 6 hours per day). In order to maintain correct filtration of the pool water, the SP601 monitors the time for which the pump runs in normal pool operation. If the pump has only run for a short time, the system will automatically run the pump for an additional period every hour to reach the minimum filtration time set by the user.

6.1.1 Adjusting Minimum Filtration Time (No 24hr circulation pump fitted))

First push the Down and Air/Aux buttons together to display the filtration time setting on the digital readout



Press both buttons simultaneously



The default setting is 10 minutes per hour (= 4 hours per day). Holding down the will adjust the filtration time setting between 0 and 15 minutes per day).

6.1.2 Clean Up Cycle

If desired, a clean up cycle can be initiated to filter the water after the spa pool has been used. This is done by simply pushing the Pump Button to leave auto mode and switch on the pump. This will circulate the water through the filter for 90 minutes. After 90 minutes the system will return to mode and maintain the temperature ready for the next time the spa pool is used.

6.2 24hr Circulation Puras

The Spa Power 601 conting of filters the spa pool to ensure the water is clean and crystal clear for each and every space. The area silent energy efficient circulation pump constantly passes water through the filter and the circulation pump runs all the time (except for when the time clock has been set to sleep the error condition) and the heater is controlled automatically there is no need for any user controlled for these features. With a 24hr circulation pump fitted there is no need to program any filtration cycles, and the noise of a large jet pump running during filtration has been removed.

6.3 My Spa Is Too Hot In Summer!

During warm periods of the year there may be times when the actual water temperature exceeds the desired temperature set by the user. E.g. If the spa is set to heat to 35°C, but the actual water temperature is hotter than 35°C. Please consider this - In the winter your spa gets cold because the air temperature is cold. To combat this we heat the water and keep the spa covered when not in use. If the spa is turned off and the ambient temperature is 15°C, eventually the spa water will lose heat until it too is 15°C. In the summer the same applies but in reverse - you can turn the heater down, even turn the pump off, but if the ambient daytime temperature is 35°C - 42°C then the spa water will also remain at that temperature.

Manufacturers make no attempt to supply a system that cools water. The quickest way to combat the problem is to change the water, but even this new water will eventually heat up to the air temperature. Turn the set temperature down so the heater does not come on. Reduce the minimum filtration time (non circ pump models only) so the pump runs less. The less the pump runs the more the water will cool. If the nighttime temperature is low, leave the cover off the spa to let heat escape, but put it back on during the day to keep heat out. If the optional timeclock is fitted increase the sleep time period otherwise turn the spa off overnight. Also make sure the spa is shaded from direct sunlight.

Page 7

7 Sleep Timer (Optional Timeclock)

If the optional time clock has been fitted, sleep mode is used to disable automatic temperature maintenance and filtration in order to silence the spa pool during your hours of sleep. The sleep time setting is done using the digital time clock on the front of the control box (See below for setting instructions). If the spa is in use it will not enter sleep mode until 30 minutes after the last manual button push, even if the clock is calling for sleep mode. The spa can still be used manually within sleep mode times as normal. On wake up from sleep the system will run the blower for 15 seconds to purge the blower plumbing. This prevents any stagnant water from collecting in the pipes if the pool is not used for an extended period.



7.1 To Set Current Time and Day

- 1. Press the **RESET** button before use. NOTE: This is optional. It will clear the current time and program settings.
- 2. Hold down the CLOCK button and press the DAY button until the correct day is selected. Release batter tons
- Hold down the CLOCK button and press the HOUR button until the correct hour is set. Release to have the correct hour in the correct hour is set. Release to have the correct hour in the correct hour in the correct hour is set.
- 4. Hold down the CLOCK button and press the MIN button until the correct minute is set a like ase both buttons
- 5. After setting the weekday and time, the seconds will reset automatically and the second time.

7.2 To Set Programs

- Press the TIMER button. "10N" will appear at the left side of the diplomatis is the start time of the first programmed sleep block (the time you want the spa to enter the sleep mode).
- 2. Press the **DAY** button to select the days on which this sleep program operate. There are 15 settings to choose from.
- 3. Press the **HOUR** button to set the hour of the time to enter been mode
- Press the MIN button to set the minutes of the desired three enter sleep mode.
- 5. Now the start time has been set in the start time has been
- 6. Repeat the same days as used in the "10FF" time is set. (Be careful to set the same days as used in the "10N" time).
- 7. Your first you up to 8 different programmable periods. You can use all 8 settings, or as few as you like.
- 8. Eview your set programs press the **TIMER** button and keep pressing it to advance through each setting.

IMPORTANT NOTE: The "MANUAL" button on the clock can be used to override the programmed sleep settings. It is very important to ensure that the clock is set to "AUTO" so that the programmed times can operate. If the clock is manually set to ON then the pool will stay in sleep mode and THE WATER WILL GO COLD. If it is left in "OFF" then the pool will not enter the sleep mode. The clock does not return to "AUTO" by itself.

NOTE: If the "MANUAL" button on the clock is used the spa will not return to the programmed settings until the next programmed time after being returned to Auto.

8 Self-Diagnostic Error Codes

The Spa Power 601 controller has extensive self diagnostic capabilities. In the event of a problem it will indicate an error number according to the nature of the problem. The error numbers and their meanings are listed below. Note: When in an error state the alarm can be muted by pushing the AIR/AUX button.

Error 1 (H20) - Prime Failed

This is not necessarily a problem with the SP601 itself, but indicates that no water is being detected in the heater housing. Prime failed is a special case in that it can be recovered from by pushing a button. A push of the pump button will run the pump for 10 seconds to try to get water to the heater. If successful normal operation will resume. If unsuccessful, Error 1 (H20) will be indicated on the display again.

Error 2 - Not Used. With any Error 3-8, spa operation will stop and not continue until the controller is reset. (Switched off and on again at the main power supply)

Error 3 - Stuck Button

This error indicates that one of the buttons in the touchpad is stuck or has been held down for more than one must be caused by the pool cover pressing on the touchpad or by water getting into the touchpad or by damage to the touchpad or its cable. Try to reset the spa. If there is still a problem then contact your spa pool reseller.

Error 4 - No Water Sensor

This error indicates a problem with the optical water sensor in the heater. The other may by caused by the sensor being disconnected or by damage to the sensor. Try to reset the spa. If there is still a problem en contact your spa pool reseller.

Error 5 - Overtemperature

This error indicates that the digital temperature sensor in the heater or pool has detected a temperature of 45°C or more. This may not be a problem with the SP601, it may be caused by excessive pump for the water, or pump failure. Turn off the spa and allow time for the water to cool. If there is still a problem to cool water to cool.

Error 6 - Thermal Cut Out Tripped

This error indicates that the safety the momechanical over temperature cut out on the heater has operated. This is not necessarily a problem with the Sp601 that are occurred from an air lock around the element, high temperatures during shipping, or failure of the pump. This automatic cut out will only reset once the element has cooled below about 38°C. The unit must then be reset before it will resume operation witch off and on at the mains power supply).

Erre Dtuck Relay

This error indicates a problem with the heater control circuitry inside the unit. Contact your spa pool reseller.

Error 8 - No Temperature Data

This error indicates a problem with the digital temperature sensor in the heater or pool wall or that both the in heater and in pool sensors are connected. Check that only one sensor is connected and that it has not become disconnected or damaged. Try to reset the spa. If there is still a problem then contact your spa pool reseller.

Safety Notes

Before using ensure that the spa pool has been connected to a suitable weather protected outlet socket, equipped with a double pole isolating switch, which is of the correct rating and complies with the local wiring regulations.

When installing refer to your local wiring code. In particular refer to ECP 2 & ECP 25 (AS / NZ) and EN 60364-4-1 & EN 60364-7-1 (EU). The system must be installed in such a way that live parts are not accessible by a person in the pool. If a supply cord is not fitted the system must be permanently connected to fixed wiring through a 30mA or less RCD.

This appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure they do not play with the appliance.

Spaparts.com.auparts

Spa-Quip Australia Pty Ltd Spa-Power Equipment

www.spa-quip.com.au service@spa-quip.com.au

Ph: 61 2 9634 5600 Fax: 61 2 9634 5900

Unit 2 13, Hoyle Avenue Castle Hill NSW 2154 Australia

Spa-Quip Ltd

Spa-Power Equipment

www.spa-quip.co.nz service@spa-quip.co.nz

Ph: 64 9 415 8622 Fax: 64 2 415 8621

2 Rothwell Ave North Harbour Industrial Park, Auckland NZ

