



Giving full control to wet fingers!





C in.K175™AEWARE AUDIO/VIDEO KEYPAD

Warnings:

FAILURE TO COMPLY WITH THE FOLLOWING WARNINGS MAY SIGNIFICANTLY SHORTEN THE PRODUCT'S LIFE TIME, AND LEAD TO FAILURES AS WELL AS HAZARDOUS CONDITIONS*. COMMON SENSE MUST ALWAYS PREVAIL WHEN EVALUATING THE INSTALLATION AND/OR USE OF ANY ELECTRONIC CONTROL IN A FINAL APPLICATION.

- The maximum ambient conditions this PRODUCT is subjected to (temperature, humidity, etc.) are not to be exceeded.
- This PRODUCT must be installed by a qualified personnel
- Only qualified personnel are to service this PRODUCT. There are no user serviceable
 parts inside.
- This PRODUCT is only compatible with Aeware's® in.tune™ products.
- This PRODUCT should be installed on a clean flat surface.
- The gasket on the back of the unit will prevent water infiltration inside, behind the
 mounted surface. If the gasket is damaged, the user must seal the back of the unit with
 silicone to avoid any leakage behind the mounted surface.
- HAZARDOUS CONDITION: A condition that is potentially damaging and/or dangerous to its operator or surroundings. This includes, but is not limited to: fire, flooding or other water damage, dielectric breakdowns (presence of high voltage), etc.

Compatibility:

Radio models supported by in.k175 $^{\text{TM}}$ are:

- Aeware® in.tune™ / in.tune.110™ receiver model.
- \bullet Aeware® in.pix $^{\text{TM}}$ audio/video model.

Mechanical Specs:

- 3.58 (Length) by 2.15" (Width) by 0.20" (Height).
- Soft gasket

Environmentals:

• Humidity:

Up to 95 % condensing

Operating temp.: -20 to 50°C

Storage temp.: -30 to 70°C

Standards:

- IP rating IPX5
- UV resistant
- UL 1563
- CSA C22.2 No.218.1

User Instructions:



Source: Pressing SRC will allow you to select a source between

the following (in order): Tuner, CD/DVD, CD changer, Aux.



Band: Press Band to select between FM1, FM2, FM3, AM1,

AM2 and WB (Weather Band available with in.tune only)



Track Down:

Radio mode Press Track Down to go to the previous preset station.

Weather band Press Track Down to go to the previous memorized station

(in.tune only).

CD mode Press Track Down to change music track.

MP3 mode Press Track Down to select file Down. If source is CD

or CD changer, press on this key to go back to

the previous song.

DVD mode Press Track Down to go to next lower chapter.

Mute: A 2 seconds press on this key mute the audio output.

Press again during 2 seconds to return to previous

volume level.

User Instructions:



Track Up:

Radio mode Press Track Up to go to the next preset station.

Weather band Press Track Up to go to the next memorized station

(in.tune only).

CD mode Press Track Up to change music track.

MP3 mode Press Track Up to select file up. If source is CD or CD

changer, press on this key to go forward to the next song.

DVD mode Press Track Up to go to next higher chapter.



Volume Up:


Press on this key to increase volume.



Volume Down:

Press on this key to decrease volume.

Wiring Diagram:

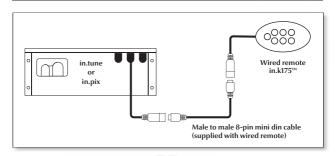

Installation:


 To install the in.k175™, use the drilling template to cut the surface, peel off the backing paper of the adhesive and stick the in.k175™ on the surface.

(see illustration)



Drilling template:

• scale 1:1

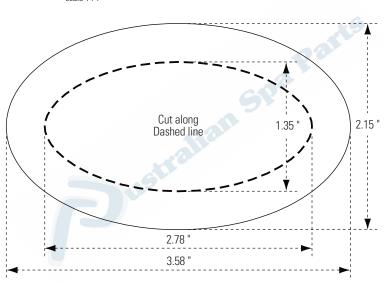

User Instructions:





Power:

Fader:

Press Power to turn system on or off.

A 2 seconds press on - will allow you to change the fader adjustments: FAD-FRONT: Front speaker only. FAD-REAR: Rear speaker only. FAD-ALL: Front and rear speakers.



