

 


in.pix



Fully and truly waterproof
dvd/cd/mp3 player & am-fm receiver

User's manual

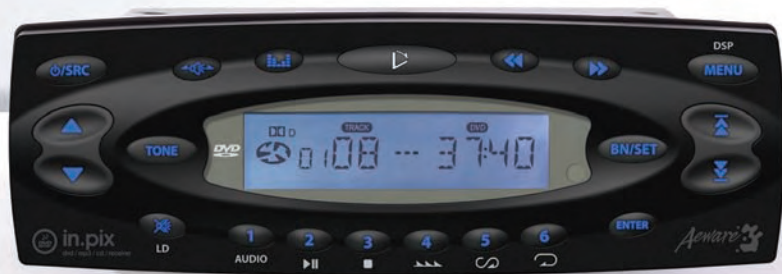

Designed to be used in
humid environments.

*Aeware*³
by gecko





Table of contents

features	3
warning	4
about dvds and compact discs	6
function description	8
icon description	9
instructions	
- general	10
- radio mode	13
- auxiliary mode	15
- dvd or cd mode	16
- mp3 mode	19
basic operations of optional IR remote control (IRMT-4)	21
parts list	24
installation & connections	25
accessories	33
specifications	34



 Australian Spa Parts



Congratulations!

Congratulations on the purchase of your very own in.pix DVD / mp3 / CD player and am-fm receiver! You own one of the industry's best entertainment system. This system is UV, salt spray and water resistant and is designed to provide hours of troublefree usage. Take a moment to read through this manual and become familiar with the operations and features of your new product.

Main features

- Fully waterproof
- 50 Watts x 4 amplifiers
- AM/FM tuner
- Automatic/manual tuning
- Compatible with European and North American radio stations
- Multiple station presets
- DVD-Video, DVD-RAM/DVD-R, HDCD, CD, CD-R and CD-RW
- MP3 and JPEG
- Built-in IR remote sensor
- Compatible with Aeware's auxiliary controls (in.k155 & in.k455)
- Fader key (Aeware's exclusive feature)
- LCD display and clock functions

**WARNING**

Before installing or connecting the unit, please read the following.

DO NOT DISASSEMBLE OR ALTER.

Doing so may result in an accident, fire or electrical shock.

USE THE CORRECT AMPERE RATING WHEN REPLACING FUSES.

Failure to do so may result in fire or electrical shock.

DO NOT BLOCK VENTS OR RADIATOR PANELS.

Doing so may cause heat to build up inside and may result in fire.

DO NOT PLACE HANDS, FINGERS OR FOREIGN OBJECTS IN INSERTION SLOTS OR GAPS.

Doing so may result in personal injury or damage to the product.

DO NOT PLACE HANDS OR FINGERS ON RADIATOR PANELS.

Doing so may result in personal injury.

DO NOT USE FOAM TO ISOLATE THE UNIT.

Doing so may cause heat to build up inside and may result in fire.

INSTALL UNIT 1" AWAY FROM OTHER SURFACES.

Make sure to leave a clearance of at least 1" from other surfaces.

INSTALL MOUNTING STRAP

The in.tune must always be installed with the mounting strap firmly-

fixed to a solid part. Failure to do so may result in damage to the unit and annulment of the warranty, (see page 32 for more details).

DO NOT INSERT A WET CD/DVD DISK IN YOUR IN.PIX

Do not insert a wet CD or DVD disk in the disk slot of your in.pix CD/ DVD player & receiver. Doing so will void the warranty of your in.pix.

**PRECAUTIONS****Damaged disc**

Do not attempt to play a cracked, warped or damaged disc. Playing such a disc could severely damage the mechanism.

Maintenance

If you have problems, do not attempt to repair the unit yourself. Return it to your dealer or service station for servicing.

Accessory parts

Be sure to use only the specified accessory parts. Use of other than designated parts may damage this unit internally or may not securely install the unit in place. This may cause parts to become loose resulting in hazards or product failure.

**Disposal of the product**

The appliance (or the product) must be disposed of separately in accordance with the local waste disposal legislation in force.

**WARNING**

When this equipment is provided as an audio/video component for spas, UL 1563 - 5th edition requires that the following instructions (or equivalent) be provided as part of the instruction manual for the spa equipment.

PREVENT ELECTROCUTION

Do not connect any auxiliary components (for example cable, additional speakers, headphones, additional audio/video components, etc) to the system.

These units are not provided with an outdoor antennae; when provided, it should be installed in accordance with Article 810 of the National Electrical Code, ANSI/NFPA 70.

Do not service this product yourself as opening or removing covers may expose you to dangerous voltage or other risk of injury. Refer all servicing to qualified service personnel.

 
When the power supply connections or power supply cord(s) are damaged; if water is entering the audio/video compartment or any electrical equipment compartment area, if the protective shields or barriers are showing signs of deterioration; or if there are signs of other potential damage to the unit, turn off the unit and refer servicing to a qualified service personnel.

**CAUTION- RISK OF ELECTRIC SHOCK !**

DO NOT LEAVE COMPARTMENT DOOR OPEN.


REPLACE COMPONENTS ONLY WITH IDENTICAL COMPONENTS.

DO NOT OPERATE THE AUDIO/VIDEO CONTROLS WHILE INSIDE THE SPA.

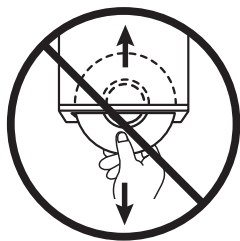

Never attempt the following

 Do not grip or pull out the disc while it is being pulled back into the player by the automatic reloading mechanism. Do not attempt to insert a disc into the unit when power is off.

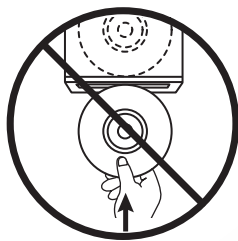

Inserting a disc

Make sure label side is facing up when you insert the disc.

Do not try to insert another disc when one has already been inserted.

If a disc is inserted incorrectly, the "DISC ERROR" message will be displayed twice, then DVD player will return to Radio mode. If the player continues to display "DISC ERROR" message, push the **Reset** button with a pointed object such as a ballpoint pen.

 


DVD & CD logo marks

Use only compact discs with the label side showing DVD-Video, DVD-RAM/DVD-R, HDCD, CD, CD-R and CD-RW.

Correct performance can't be guaranteed if you use unspecified compact discs.

A DVD-R, CD-R or CD-RW that hasn't been finalized (closed) or on which a recording failure has occurred can't be played.

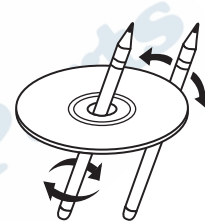


New discs

New discs may sometimes have some roughness around the edges. If such discs are used, the player may not work properly. Use a ballpoint pen or the like to remove any roughness from the edge of the disc.



Irregular shaped discs

 Be sure to use round shape discs only for this unit and never use any special shape discs. Using a special shape disc may cause damage to the mechanism.

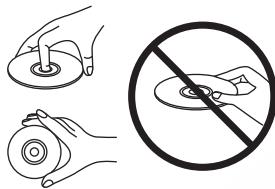

Correct handling

 
Handle the disc by its edge. To keep the disc clean, do not touch the surface. Never stick paper or tape on the surface of the disc or mark the surface with a pencil or pen.



Disc cleaning


Fingerprints, dust or soil on the surface of the disc could cause the DVD player to skip. To remove these, wipe the playing surface with a clean, soft cloth from the center of the disc to the outer edge.


Never use solvents, such as commercially available cleaners, anti-static spray or thinner to clean discs.

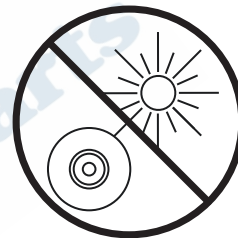


Storage

   Do not expose discs to direct sunlight or any heat source. Do not expose discs to excess humidity or dust.

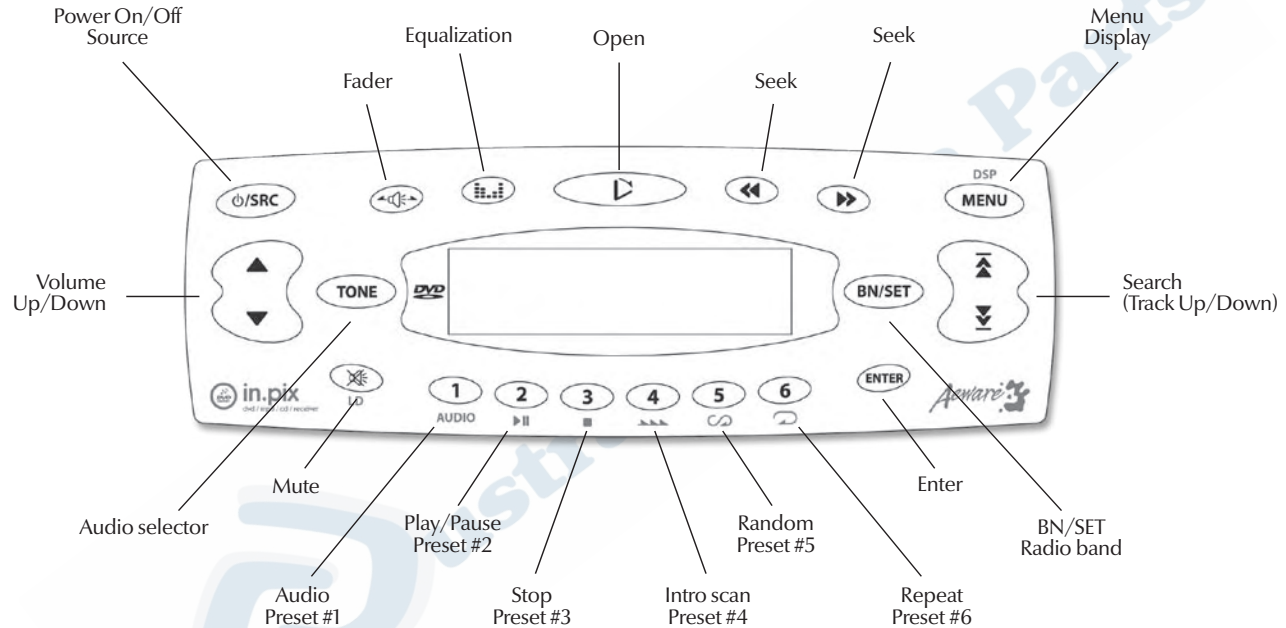

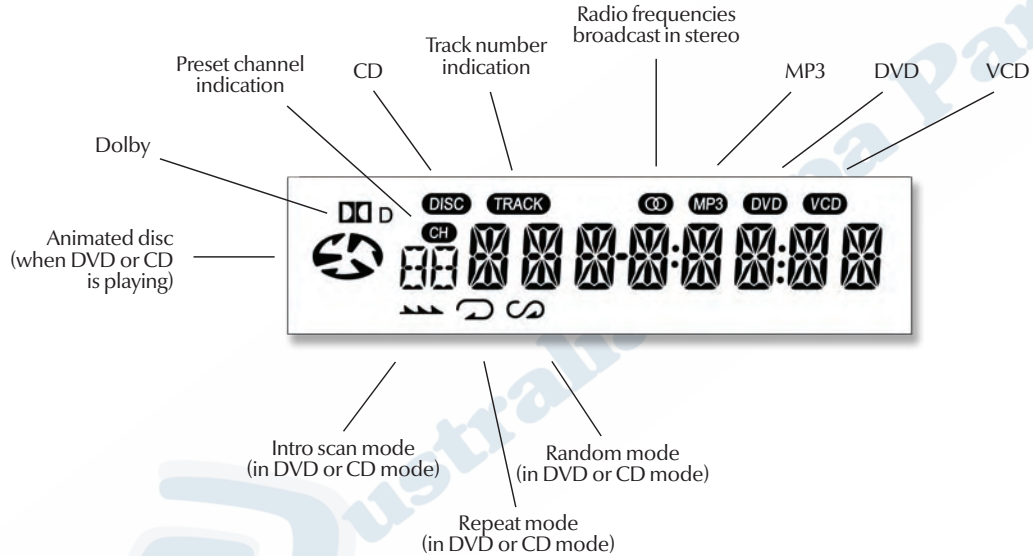

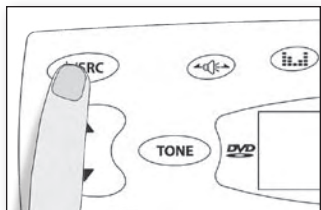


Power/Source ϕ /SRC

Press and hold **Power** to turn system on or off.

When unit is turned on, press key again to select a source from the following: Radio, DVD or Aux.

 
Clock is displayed on LCD when unit is off.

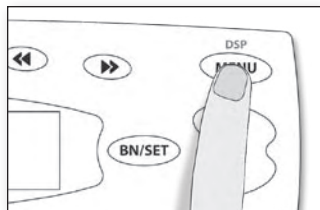

Clock setting MENU DSP

To set the time, press and hold **Menu/DSP**.

 
Note that you must be in Radio mode to set the time (refer to corresponding section of this manual).

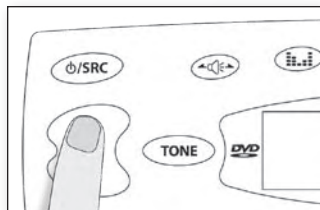

Volume up or down \blacktriangle \blacktriangledown

Press **Volume up** or **down** to increase or decrease volume.

 
Depending on what you select using the audio selector (TONE), this key will also be used to adjust bass, treble, balance and fader.

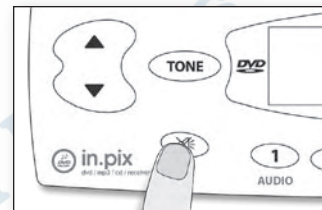

Mute/LD \times

Press **Mute** to mute the audio output. Press again to return to previous volume level.

 Press and hold key to turn loudness on or off.

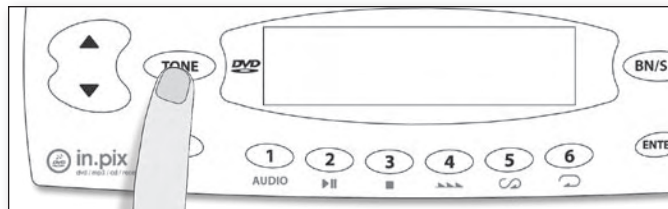

Tone

Use **TONE** to select either (in order): volume, bass, treble, balance or fader. To change the desired parameter, use **Volume up** or **down**. ▲▼

 
Bass control: Adjusts the amount of low frequency that you hear.

Treble control : Adjusts the amount of high frequency that you hear.

Balance control: Adjusts the amount of sound output to the left and right speakers.


Fader control: Adjusts the amount of sound output (see **Fader** key on next page).

Press and hold key into Time adjust mode, then press **Tone** key to select hour/minute, adjust by using **Volume up** or **down**. ▲▼

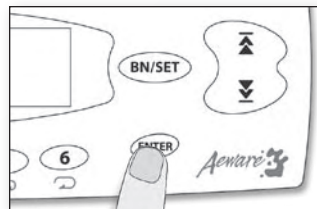


Enter

 When you are in the DVD menu, use **Enter** key to confirm the selections you make (e.g. selecting language).

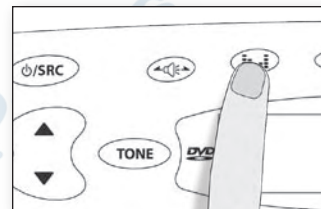

Equalization

 Successive presses on **EQ** will allow you to choose from Pop, Classic, Rock or EQ off.

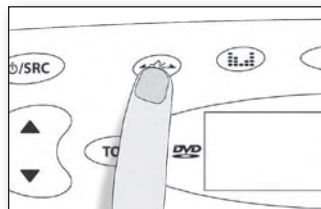


Fader

Successive presses on **Fader** will allow you to select from one of the following adjustments:

FAD-REAR: Rear speaker only.

FAD-FRONT: Front speaker only.

 
FAD-ALL: Front and rear speakers.

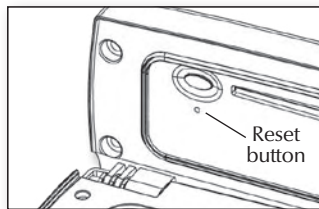

Reset button

If keys on the front panel become locked up, i.e. keys do not function at all, or the display area becomes unreadable, use a ballpoint pen to press the **Reset button**.

 Pressing **Reset** button clears all memory (except station presets) and resets the display to its default settings. The clock will lose the set time.

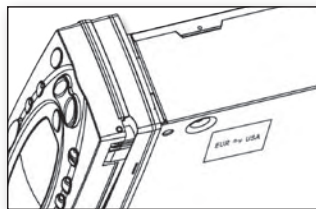

USA/Europe switch

You can switch from American (USA) to European radio stations. To do so, power down the unit first. Then lift up the sticker which is located under the DVD player.

 
EUR ↔ USA

Switch from American (USA) to European or vice-versa, as indicated on the sticker then put sticker back in place and power up the unit.




Protective cover

We recommend to install the protective cover on the front panel when DVD player is not used for a long period of time or when the surface on which the DVD player is installed needs some cleaning.

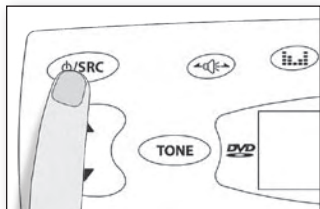


Selecting radio mode **SRC**

 Press **POWER/SRC** until Radio mode is displayed.

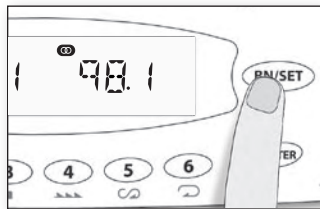

Selecting radio band **BN/SET**

 Press **BN/SET** to select radio band.

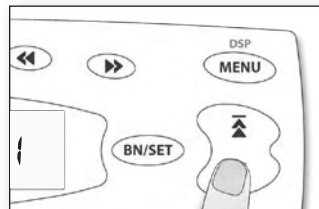

Tuning up or down **Track up** **Track down**

Press **Track up** to manually adjust frequency up.

 
Press **Track down** to manually adjust frequency down.



Seek up or down **Seek up** **Seek down**

Press **Seek up** to make a seek up to the next station. Scan mode stops as soon as a strong station is found.


Press **Seek down** to make a seek down to the next station. Scan mode stops as soon as a strong station is found.

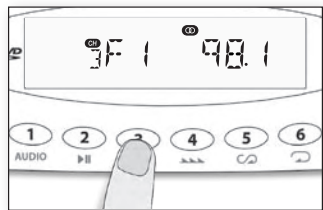

Preset stations 1 2 3 4 5 6

Any station may be preset simply by pressing and holding one of the keys (1 to 6).

 Press one of the keys (1 to 6) to recall the stored stations.

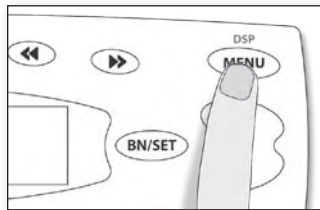


Display or set the time

Press **MENU/DSP** to display the time.

Press and hold key to set the time.

Press **TONE** to set the minutes.
Press again to set the hours.

 
Press **Volume up** or **down** to adjust the value. ▲▼

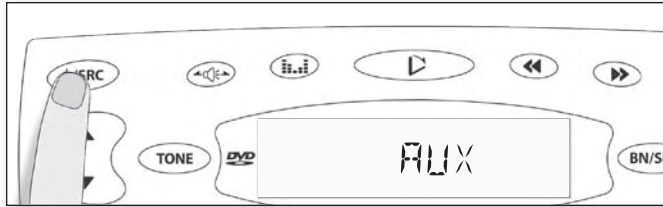

Auxiliary input /SRC

Press **SRC** until the display reads "AUX", which indicates that the auxiliary unit is playing.

 This mode allows to play audio and video from external source such as a video, etc. (please refer to "installation & connections" section for the connection of such external devices).

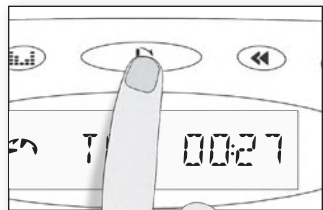


Inserting disc

Press **Open** to flip down the front panel and access the disc slot. Insert DVD or CD into the disc slot.


The DVD or CD will load and play automatically.

 If the disc does not auto load, do not force it. Press the **Eject** button as you may already have a disc inserted.

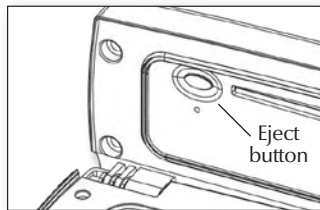


Ejecting disc

 To eject disc, flip-down front panel must be open, then press **Eject** button, located on the left.

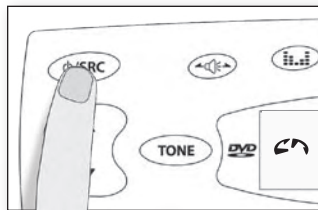


Selecting DVD or CD mode

 Press **Power/SRC** until DVD or Aux mode is displayed.

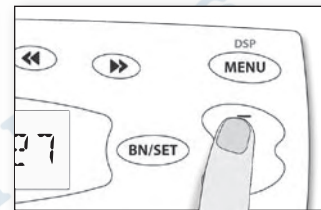


Track up or down

 To change track, simply press **Track up or down**.

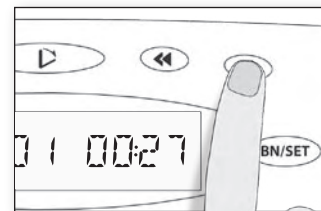

Fast forward/rewind

 
To fast forward or rewind, simply press **Seek up or down**.

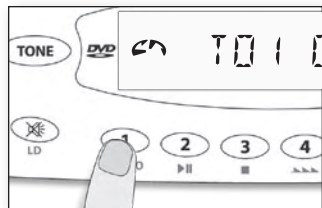

Audio AUDIO 1

In DVD mode, press key to select language.

 In CD mode, press key to select right or left channel sound.

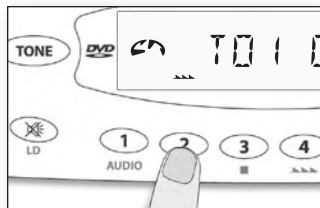

Play/Pause ►|| 2

To pause the playing of a disc, press **Pause**.

 
To resume play, press key again.



Stop ■ 3

To stop the playing of a disc, press **Stop**.


To resume play, press **Play** once.

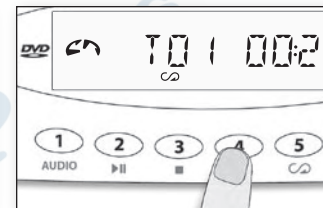

Intro scan mode ≡≡≡ 4

You can preview each song of the current disc for about 10 seconds. Simply press **Scan**.

 Press again to turn off this feature.

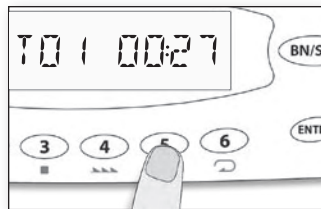

Random mode 5

Press **Random** to play tracks randomly.

 
Press again to turn off this feature.



Repeat mode 6



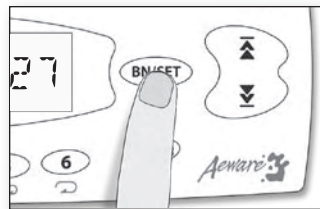

To play a track repeatedly, press **Repeat**.

 
Press again to turn off this feature.



BN/SET BN/SET



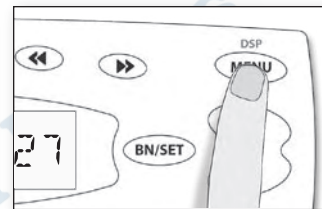

In DVD mode, press this key to access Set up menu.

To set the menu, use keys Up , Down , Left , Right  and Enter key to confirm your selection.



MENU/DSP MENU DSP

In DVD mode, press this key to access DVD menu.

Select the DVD menu by using Up , Down , Left , Right  and Enter key to confirm your selection.



Playback order of MP3 files

- A directory that does not include an MP3 file is skipped.
- We recommend that you make no more than two levels for each disc.
- Maximum number of folders: 256
- Maximum number of folder levels: 8
- Maximum number of characters for MP3 file name and folder name: 32
- Sampling frequency: 16 kHz, 22.05 kHz, 24 kHz, 32 kHz, 44.1 kHz, 48 kHz
- Bit rates: 8-320 Kbps
- MP3 decoding format: MPEG 1 & 2 Audio Layer 3.

Reading files on a disc

 
When a disc containing MP3 data is loaded, the unit checks all the data on the disc. If the disc contains a lot of folders with many levels, it takes a longer time to start playback.

In addition, it may take time for the unit to move to the next MP3 file and Fast Forward function may not be performed smoothly.



Example of a disc's folder/file hierarchy


Level 1 Level 2 Level 3 Level 4 Level 5

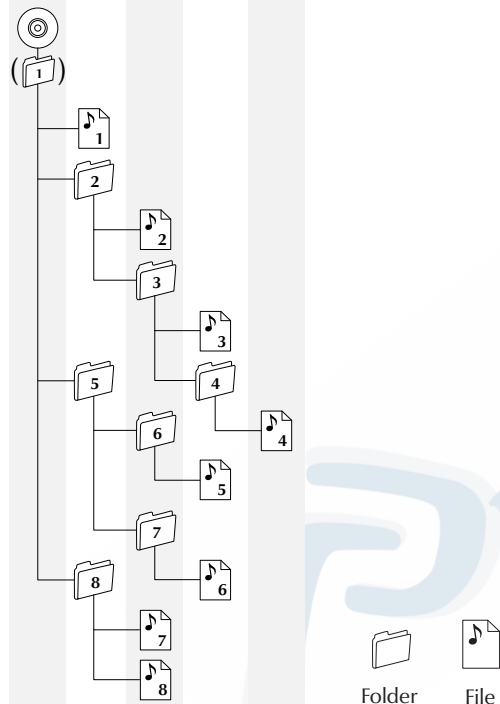


Operation of keys

In play mode:

 - Press **▶** to play next file.



- Press **◀** to play previous file.

 

You must press **■** (Stop key) before selecting a folder:

- Press **◀◀** to access the folder column.
- Press **▲** or **▼** to select folder up or down.
- Press **Enter** key to access the file column.
- Press **▲** or **▼** to select file up or down.
- Press **Enter** to play selected file.

Note: For easier selection, the folder/file hierarchy on a disc can be visualized on the tv screen.



Sold separately

* The code for your in.pix is **0037**.

Key/Icon

Description



When pressing a key, the red LED blinks to show that the remote control is working properly and sending signals.



Use **setup** for all programming sequences. Refer to the remote control (IRMT-4) instructions manual for detailed explanation on programming sequences.



Press **Power** to turn system on. Press **Power** again to turn it off.



Press **DVD** to control the in.pix*.



Press **VOL + or -** to increase or decrease volume.



Radio mode:

Press **CH + or -** to go to the next or previous preset station. Press and hold key to make a seek up or down to the next station. Scan mode stops as soon as a strong station is found.

DVD mode:

Press **CH + or -** to change track. Press and hold key to fast fwd or rew.

CD mode:

Press **CH + or -** to change music track. Press and hold key to fast fwd or rew.

MP3 mode:

Press **CH + or -** to select file up or down. Press and hold key to fast fwd or rew.





Key/Icon	Description
	<p>DVD, CD and MP3 mode: Press this key to play or pause.</p>
	<p>Radio mode: Press one of these keys to manually adjust the frequency up or down.</p>
	<p>DVD mode: Press one of these keys to change track (chapter).</p> <p>CD mode: Press one of these keys to change music track.</p> <p>MP3 mode: Press one of these keys to select track up or down.</p>
	<p>Radio mode: Press BAND to select radio band. DVD, CD and MP3 mode: press this key to stop.</p>
	<p>DVD mode: Press this key to activate the currently selected option.</p>
	<p>While holding shift, press one of the following keys to select secondary functions (the LED lights up above key).</p>
	<p>Radio mode: Use these keys (1-6) to recall the stored stations. Any station may be preset simply by pressing and holding one of the keys (1 to 6).</p>



Key/Icon

Description

 


Successive presses on   will allow you to select from one of the following adjustments:

FAD-FRONT: Front speaker only.
FAD-REAR: Rear speaker only.
FAD-ALL: Front and rear speakers.



DVD mode:
Press this key twice to access DVD menu.

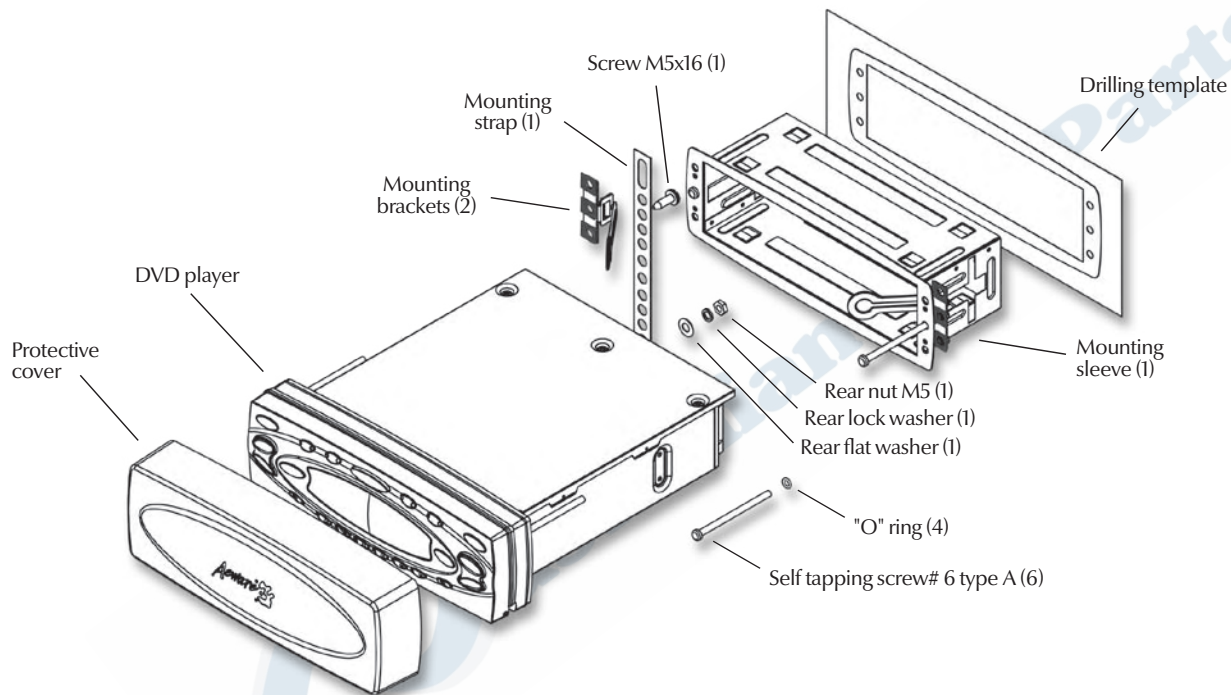



Wiring

Yellow wire (w/fuse)

Connect this wire to a constant +12 volt power source (a power source that is not controlled by the ignition key).

Red wire

Connect this wire to a switched +12 volt power source (a power source turned on and off by the ignition key).

Blue wire

Connect this wire to the (+) power antenna activation circuit. If no power antenna exists, tape off the end of this wire to prevent shorting out of the unit.

Black wire

Connect this wire to the ground power source. This wire is the chassis grounding wire for the unit.

Orange wire

Connect this wire to the light control switch (dimmer control). If no lighting circuit is available, tape off the end of this wire to prevent shorting out of the unit.

White wire

Connect this wire to the left front speaker (+) positive terminal or wire.

White wire with black stripe

Connect this wire to the left front speaker (-) negative terminal or wire.

Gray wire

Connect this wire to the right front speaker (+) positive terminal or wire.

Gray wire with black stripe

Connect this wire to the right front speaker (-) negative terminal or wire.

Green wire

Connect this wire to the left rear speaker (+) positive terminal or wire.

Green wire with black stripe

Connect this wire to the left rear speaker (-) negative terminal or wire.

Purple wire

Connect this wire to the right rear speaker (+) positive terminal or wire.

Purple wire with black stripe

Connect this wire to the right rear speaker (-) negative terminal or wire.

Gray cable with red/white/yellow RCA connectors

Connect to the audio/video line output of any additional audio or video sound source.

Black cable with red/white RCA connectors

Provides L/R channel (front/rear) audio signal output to an additional amplifier.

Black cable with yellow RCA connector

Provides the video output signal of the DVD player. Connect to the video input connector of the TV.



Wiring (Con't.)

Note:

This unit is designed to connect 4 speakers. If the installation only requires 2 speakers, use the white and gray wire sets to connect the speakers.



WARNING

Any wires left unconnected must be taped off or capped off to prevent shorting.

DO NOT connect speaker ground wires together.

 
DO NOT connect speaker ground wires to the chassis of the vehicle and to the power supply ground.

DO NOT connect front and rear speaker wires together.

FAILURE TO FOLLOW ANY OF THESE WARNINGS WILL RESULT IN DAMAGE TO THIS UNIT AND VOIDS THE WARRANTY.




Wiring diagram

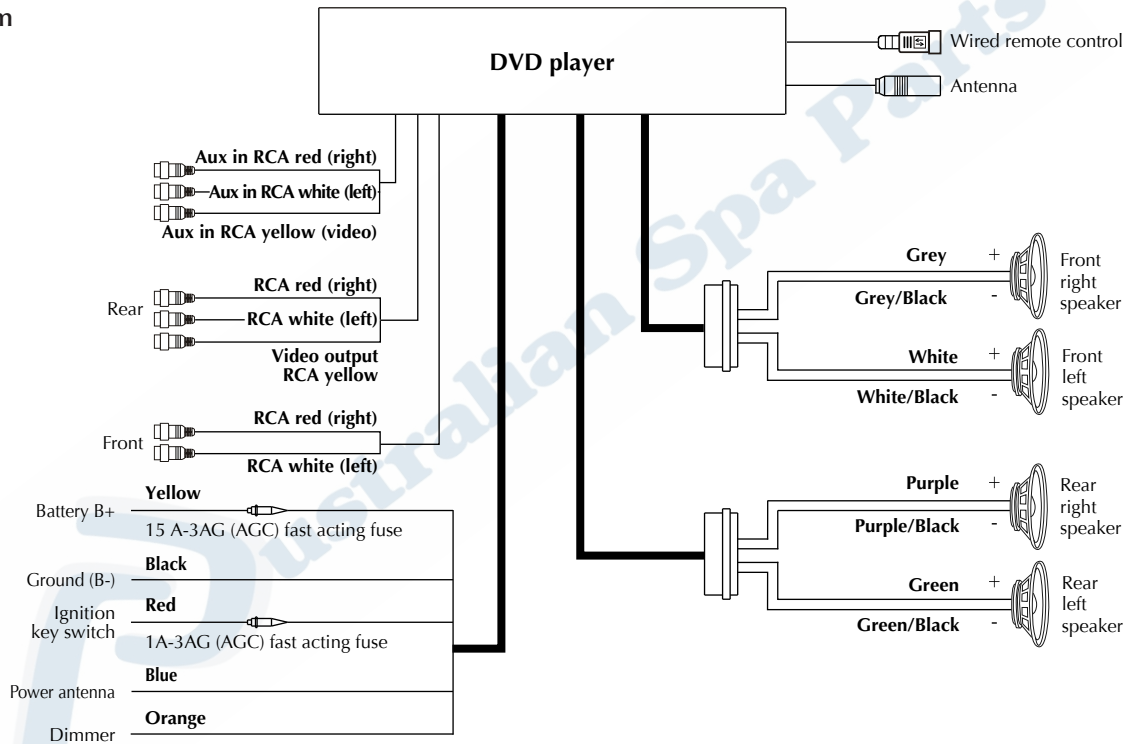






Wired remote connection

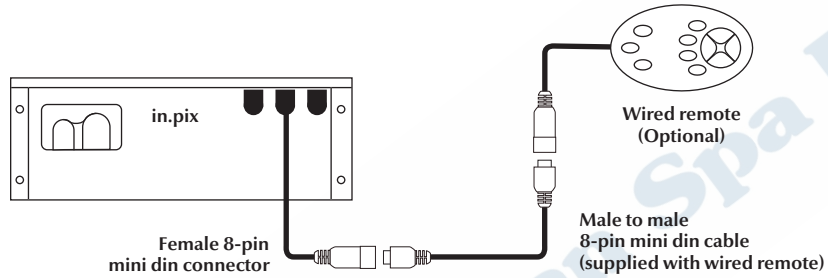 




Auxiliary connection

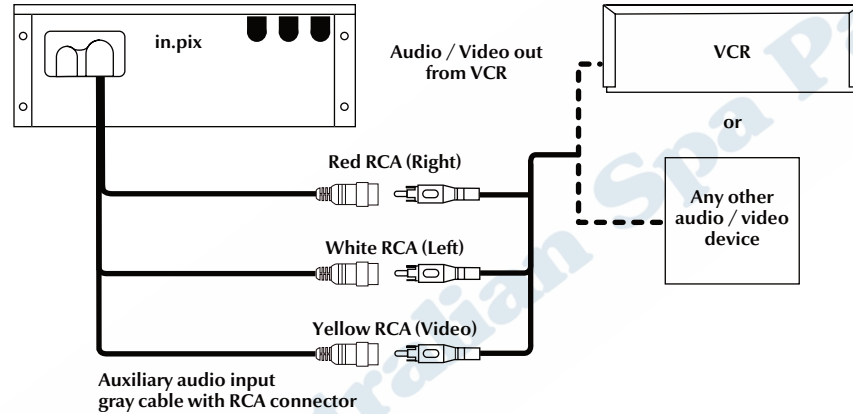 

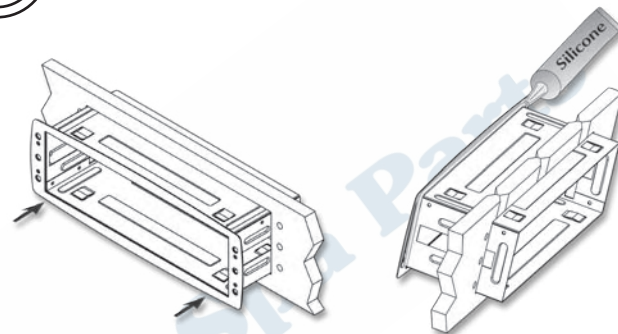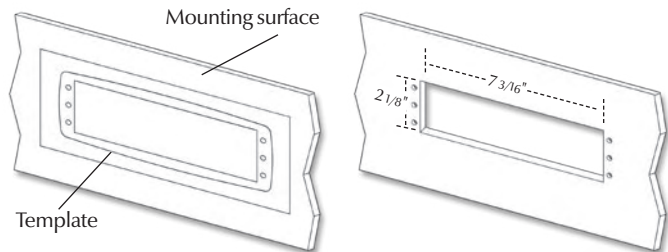  

Step 1

 Using the drilling template supplied with the unit, determine the mounting location and then stick the template on the location.

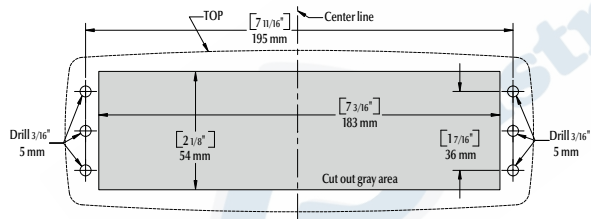

Cut and remove the hatching area on the template. Then drill six 3/16" (5mm) mounting holes in the exact position according to the mounting paper.

 
 
Step 2

Insert the mounting sleeve into the hole (installation opening).

Step 3

If the installation location is not perfectly even (e.g. wood surface), make a silicone joint between the installation location and the mounting sleeve (to avoid water leakage). Apply silicone all around the unit. Let the silicone dry and remove excess.

Note: Failure to apply silicone may damage the unit and surround equipment!

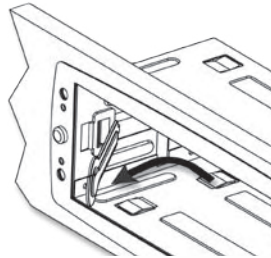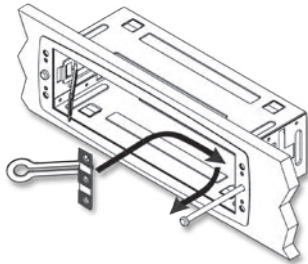


Step 4

Fixing the mounting sleeve:

- Insert mounting bracket.
- Then pull bracket towards you.
- Fix bracket with self tapping screws # 6 x 2" type A.
- Make sure the 6 holes are correctly aligned.
- Brake the installation handle by moving it back and forth.
- Repeat steps a) to e) for the other bracket.

 
Note: The use of an adjustable torque wrench is recommended. Torque setting: 8-12 lbs-in (0.9-1.36 N·m).

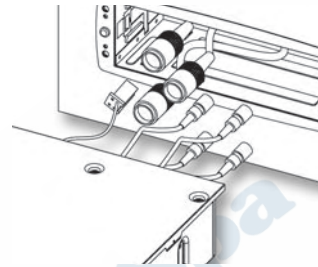

Step 5

Connect wires.

 Refer to wiring section (page 27) of this manual for more details.


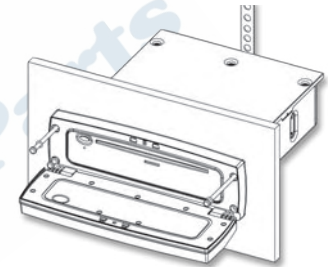


Step 6

Insert the DVD player into the mounting sleeve.

Open front panel and fix DVD player with (4) self tapping screws # 6 x 2" type A.

  Note: The use of an adjustable torque wrench is recommended. Torque setting: 8-12 lbs-in (0.9-1.36 N·m).

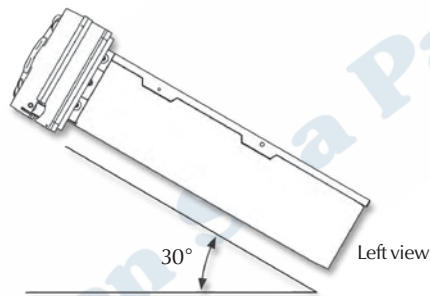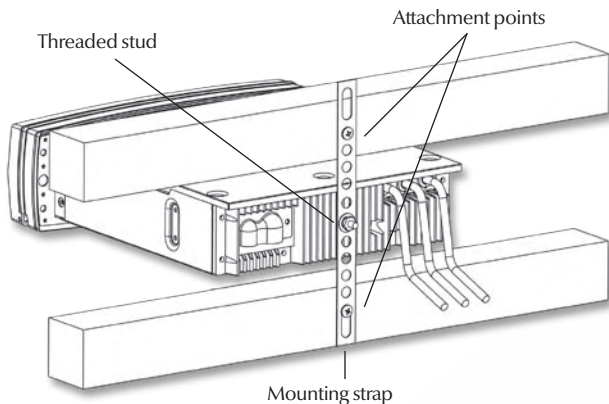

Step 7

 
Re-inforce the back side of the DVD Player attaching the threaded stud to the metal mounting strap. Attach the other end of the strap to a solid part of the mounting area (as illustrated above). Please note that if necessary, the strap can be bent to the desired angle (to fit the mounting area).

Installation angle


If installation angle exceeds 30° from horizontal, the unit might not give its optimum performance.

Important: The in.pix must always be installed with the mounting strap firmly fixed to a solid part. Failure to do so may result in damage to the unit and annulment of the warranty.


Note: Threaded stud and mounting strap are included.

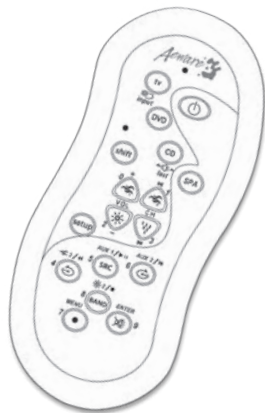

Optional IRMT-4
infrared remote control

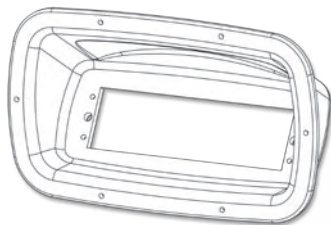 

 Optional panel housing
(30° mounting bezel)
for in.pix DVD Player.

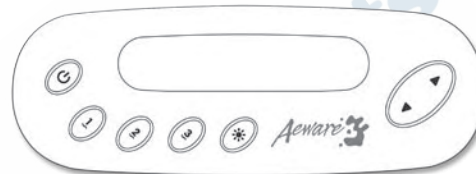

Optional in.k455
wired remote control with display



Optional in.k155
wired remote control

Sold separately.

For more information on wired and infrared remotes or other accessories, visit our website at www.aeware.ca

Designs are subject to change without prior notice.

**General specifications:****Power supply voltage:** 14,4V (11-16V allowable), negative ground**Max. current consumption:** 15A**Back-up current (Ignition OFF):** 15mA (Max.)**Speaker impedance:** 4Ω**Operating temperature:** 50°C (122°F) to -20°C (68°F)**Weight:** 2.18kg (4.8lbs)**Dimensions (W x H x D):**

Chassis: 178mm x 50mm x 190mm (7" x 2" x 7-1/2")

Front Panel: 212mm x 70mm x 32mm (8-3/8" x 2-3/4" x 1-1/4")

Audio specifications:**Max. power output:** 50W x 4 ch (200W total)**Continuous average power output:** 20W x 4 ch, into 4 Ω, 20Hz
to 20kHz, 1%TDH**Bass control:** ± 10dB (100Hz)**Treble control:** ± 10dB (10kHz)**Loudness contour:** + 10dB (100Hz),
+ 10dB (10kHz) (at volume -20dB)**Max. preout level/load:** 5V/10KΩ**DVD player:****Signal to noise ratio (S/N):** > 65dB**Channel separation:** > 50dB (at 1kHz)**Dynamic range:** 80dB (at 1kHz)**Frequency response:** 20Hz to 18kHz**Total harmonic distortion (THD):** 0,5% (at 1kHz)**Sampling frequency:** 44.1kHz*Specifications and design are subject to change without prior notice.*

**FM tuner:**

Usable sensitivity (S/N = 30dB):	4 μ V
----------------------------------	-----------

Stereo separation:	30dB
--------------------	------

Signal to noise ratio (S/N):	55dB
------------------------------	------

Frequency range:

American (USA):	87,5MHz - 107,9MHz
-----------------	--------------------

Europe:	87,5MHz - 108MHz
---------	------------------

Frequency spacing:

American (USA):	200kHz
-----------------	--------

Europe:	50kHz
---------	-------

AM tuner:

Usable sensitivity (S/N = 20dB):	31 μ V
----------------------------------	------------

Frequency range:

American (USA):	530kHz - 1710kHz
-----------------	------------------

Europe:	522kHz - 1620kHz
---------	------------------

Frequency spacing:

American (USA):	10kHz
-----------------	-------

Europe:	9kHz
---------	------

Specifications and design are subject to change without prior notice.

Advanced electronics! Water resistance!



Aeware **3**
by gecko

Gecko Alliance

450 des Canetons, Quebec City (QC) G2E 5W6 Canada, 1.800.78.GECKO
9225 Stellar Court, Corona, CA 92883 USA, 1.866.639.7274

www.geckoalliance.com

9919-100667
Rev. 01/07

