

CODE TABLE

Setup Codes for TVs:

AOC	0030, 0019
Admiral	0093, 0463
Aiko	0092
Akai	0030
Alaron	0179
Ambassador	0177
America Action	0180
Ampro	0751
Anam	0180
Audiovox	0451, 0180 0092, 0623
Baysonic	0180
Belcor	0019
Bell & Howell	0154, 0016
Bradford	0180
Brockwood	0019
Broksonic	0236, 0463
CXC	0180
Candie	0030, 0056
Carnivale	0030
Carver	0054
Celebrity	0000
Cineral	0451, 0092
Citizen	0060, 0030 0056, 0039 0092
Concerto	0056
Contec	0180
Craig	0180
Crosley	0054
Crown	0180, 0039
Curtis Mathes	0047, 0054 0154, 0051

Setup Codes for TVs:

	0451, 0093
	0060, 0030
	0145, 0056
	0016, 0039
	0166, 0466
	1147, 1347
Daewoo	0451, 0019 0039, 0092 0622, 0624
Daytron	0019
Denon	0145
Dumont	0017, 0019
Dwin	0720, 0774
Electroband	0000
Emerson	0154, 0236 0463, 0180 0282, 0178 0019, 0179 0039, 0177 0623, 0624
Envision	0030
Fisher	0154
Fujitsu	0179
Funai	0180, 0179 0171
Futuretech	0180
GE	0047, 0051 0451, 0093 0282, 0178 0021, 0135 1147, 1347
Gibraltar	0017, 0030 0019

CODE TABLE

Setup Codes for TVs:

GoldStar	0030, 0178 0019, 0056
Gradiente	0053, 0056
Grunpy	0180, 0179
Hallmark	0178
Harley Davidson	0179
Harman/Kardon	0054
Harvard	0180
Hitachi	0145, 0056 0151
Infinity	0054
Inteq	0017
JBL	0054
JCB	0000
JVC	0053
KEC	0180
KTV	0180, 0030 0039
Kenwood	0030, 0019
LG	0056
LXI	0047, 0054 0154, 0156 0178
Logik	0016
Luxman	0056
MGA	0150, 0030 0178, 0019
MTC	0060, 0030 0019, 0056
Magnavox	0054, 0030 0179
Majestic	0016
Marantz	0054, 0030

Setup Codes for TVs:

Matsushita	0250
Megatron	0178, 0145
Memorex	0154, 0250 0463, 0150 0178, 0056 0016
Midland	0047, 0017 0051, 0039 0135
Minutz	0021
Mitsubishi	0093, 0150 0178, 0019
Motorola	0093
Multitech	0180
NAD	0156, 0178 0166
NEC	0030, 0019 0056
NTC	0092
Nikko	0030, 0178 0092
Onwa	0180
Optimus	0154, 0250 0166
Optonica	0093, 0165
Orion	0236, 0463 0179
Panasonic	0051, 0250
Penney	0047, 0156 0051, 0060 0030, 0178 0021, 0019 0056, 0039

CODE TABLE

Setup Codes for TVs:

	0135, 1347
Philco	0054, 0463 0030, 0145 0019
Philips	0054
Pilot	0030, 0019 0039
Pioneer	0166
Portland	0019, 0039 0092
Prism	0051
Proscan	0047
Proton	0178, 0466
Pulsar	0017, 0019
Quasar	0051, 0250 0165
RCA	0047, 0051 0093, 0019 0090, 0135 1047, 1147 1247, 1347
Radio Shack	0047, 0154 0165, 0180 0030, 0178 0019, 0056 0039
Realistic	0154, 0165 0180, 0030 0178, 0019 0056, 0039
Runco	0017, 0030 0603
SSS	0180, 0019

Setup Codes for TVs:

Sampo	0030, 0039
Samsung	0060, 0030 0178, 0019 0056
Samsux	0039
Sansei	0451
Sansui	0463
Sanyo	0154
Scimitsu	0017
Scotch	0178
Scott	0236, 0180 0178, 0019 0179
Sears	0047, 0054 0154, 0156 0178, 0179 0056, 0171
Semivox	0180
Semp	0156
Sharp	0093, 0165 0039
Shogun	0019
Signature	0016
Sony	0000
Soundesign	180, 0178 0179
Squareview	0171
Starlite	0180
Supreme	0000
Sylvania	0054, 0030
Symphonic	0171
TMK	0178, 0056 0177

CODE TABLE

Setup Codes for TVs:

Tandy	0093
Technics	0051, 0250
Technol Ace	0179
Techwood	0051, 0056
Teknika	0054, 0180 0150, 0060 0019, 0179 0056, 0016 0039, 0092
Telefunken	0056
Toshiba	0154, 0156 0060
Totevision	0039
Vector Research	0030
Victor	0053
Vidikron	0054
Vidtech	0178, 0019
Wards	0054, 0155 0030, 0178 0021, 0019 0179, 0056 0016
White Westinghouse	0463, 0623 0624
Yamaha	0030, 0019
Zenith	0017, 0463 0016, 0092

Setup Codes for VCRs:

Admiral	0048, 0209
Adventura	0000
Aiko	0278
Aiwa	0037, 0000
Akai	0041
America Action	0278
American High	0035
Asha	0240
Audiovox	0037
Beaumarck	0240
Bell & Howell	0104
Brocksonic	0209
Broksonic	0184, 0121 0209, 0002
CCE	0072, 0278
Calix	0037
Canon	0035
Carver	0081
Cineral	0278
Citizen	0037, 0278
Colt	0072
Craig	0037, 0047 0240, 0072 0271
Curtis Mathes	0060, 0035 0041, 0162
Cybernex	0240
Daewoo	0045, 0278
Denon	0042
Dynatech	0000
Electrohome	0037
Electroponic	0037
Emerex	0032

CODE TABLE

Setup Codes for VCRs:

Emerson	0037, 0184 0000, 0121 0043, 0209 0002, 0278
Fisher	0047, 0104
Fuji	0035, 0033
Funai	0000
GE	0060, 0035 0048, 0240
Garrard	0000
Go Video	0526
GoldStar	0037, 0038
Gradiente	0000
HI-Q	0047
Harley Davidson	0000
Harman/Kardon	0087, 0038
Harwood	0072
Headquarter	0046
Hitachi	0000, 0042 0041
Hughes Net. Sys.	0042
JVC	0067, 0041
Jensen	0041
KEC	0037, 0278
KLH	0072
Kenwood	0067, 0041 0038
Kodak	0035, 0037
LXI	0037
Lloyd's	0000
Logik	0072
MEI	0035
MGA	0240, 0043

Setup Codes for VCRs:

MGN Technology	0240
MTC	0240, 0000
Magnasonic	0278
Magnavox	0035, 0039 0081, 0000 0149
Magnin	0240
Marantz	0035, 0037
Marta	0035
Matsushita	0035, 0162 0454
Memorex	0035, 0037 0048, 0039 0047, 0240 0000, 0104 0209, 0046 1162, 1262
Minolta	0042
Mitsubishi	0048, 0067 0043
Motorola	0035, 0048
Multitech	0000, 0072
NEC	0104, 0067 0041, 0038
Nikko	0037
Noblex	0240
Olympus	0035
Optimus	0037, 0048 0104, 0162 0454, 1062 1162, 1262
Orion	0184, 0209 0002

CODE TABLE

Setup Codes for VCRs:

Panasonic	0035, 0162 0225, 0454 1162
Penney	0035, 0037 0240, 0042 0038
Pentax	0042
Philco	0035, 0209
Philips	0035, 0081
Pilot	0037
Pioneer	0067
Profitronic	0240
Proscan	0060
Protec	0072
Pulsar	0039
Quarter	0046
Quartz	0046
Quasar	0035, 0162 0454, 1162
RCA	0060, 0035 0048, 0240 0042, 0149
Radio Shack	0000
Radix	0037
Randex	0037
Realistic	0035, 0037 0048, 0047 0000, 0104 0046
Runco	0039
STS	0042
Samsung	0240, 0045
Sanky	0048, 0039

Setup Codes for VCRs:

Sansui	0000, 0067 0209, 0041 0271
Sanyo	0047, 0240 0104, 0046
Scott	0184, 0045 0121, 0043
Sears	0035, 0037 0047, 0000 0042, 0104 0046 0045
Semp	0045
Sharp	0048
Shintom	0072
Shogun	0240
Singer	0072
Sony	0035, 0032 0000, 0033
Sylvania	0035, 0081 0000, 0043
Symphonic	0000
TMK	0240
Tatung	0041
Teac	0000, 0041
Technics	0035, 0162
Teknika	0035, 0037 0000
Thomas	0000
Toshiba	0045, 0043
Totevision	0037, 0240
Unitech	0240
Vector	0045
Vector Research	0038

CODE TABLE

Setup Codes for VCRs:

Video Concepts	0045
Videosonic	0240
Wards	0060, 0035 0048, 0047 0081, 0240 0000, 0042 0072, 0149
White Westinghouse	0209, 0278
XR-1000	0035, 0000 0072
Yamaha	0038
Zenith	0039, 0000 0209, 0033

Setup Codes for CD Players:

Krell	0157
LXI	0305
Linn	0157
MCS	0029
MTC	0420
Magnavox	0157, 0305
Marantz	0029, 0157 0180
Mission	0157
NSM	0357
Nikko	0174
Onkyo	0101, 0868
Optimus	0000, 0032 0179, 0305 0037, 0420 0145, 0468 0437
Panasonic	0029, 0303
Parasound	0420
Philips	0157, 0626
Pioneer	0032, 0305 0468, 0244
Proton	0157
QED	0157
Quasar	0029
RCA	0179, 0305 0053, 0764
Realistic	0179, 0420 0180
Rotel	0157, 0420
SAE	0157
Sansui	0157, 0305
Sanyo	0179

Setup Codes for CD Players:

Aiwa	0157, 0124
Burmester	0420
California Audio Lab	0029
Garver	0157, 0179 0437
DKK	0000
Denon	0003, 0873
Emerson	0305
Fisher	0179, 0174
Garrard	0420, 0393
Genexxa	0032, 0305
Harman/Kardon	0157, 0173
Hitachi	0032
JVC	0072
Kenwood	0028, 0037 0190, 0681 0826

CODE TABLE

Setup Codes for CD Players:

Scott	0305
Sears	0305
Sharp	0037, 0180 0861
Sherwood	0180
Sony	0000, 0185 0490
Soundesign	0145
Tascam	0420
Teac	0420, 0393 0174, 0180
Technics	0029, 0303
Victor	0072
Wards	0157, 0053
Yamaha	0036, 0187
Yorx	0461

Setup Codes for Amplifiers:

Aiwa	0406
Carver	0269
Curtis Mathes	0300
Denon	0160
Harman/Kardon	0892
JVC	0331
Linn	0269
Magnavox	0269
Marantz	0269
Panasonic	0308
Philips	0269, 0892
Pioneer	0013, 0300
Sony	0220, 0689
Technics	0308

Setup Codes for Amplifiers:

Victor	0331
Wards	0013
Yamaha	0354

Setup Codes for Tuners:

ADC	0531
Adcom	0616
Aiwa	0158, 0189 0121, 0405
Akai	0224
Capetronic	0531
Carver	0189, 0008 0042, 0360
Casio	0195
Clarinette	0195
Curtis Mathes	0080
Denon	0004
Emerson	0424
Fisher	0042, 0219 0360
Garrard	0463, 0424
Harman/Kardon	0110, 0189 0891
JBL	0110
JVC	0074
Kenwood	0027, 0186 0042, 0077
Koss	0424
LXI	0181
Linn	0189
Lloyd's	0195
MCS	0039, 0346

CODE TABLE

Setup Codes for Tuners:

Magnavox	0531, 0189 0195, 0391
Marantz	0039, 0189
Modulaire	0195
NAD	0320
Nakamichi	0097, 0347
Onkyo	0135
Optimus	0531, 0670 0186, 0042 0177, 0181 0219, 0738 0801, 1023
Panasonic	0039, 0309
Penney	0195
Philips	0189, 0391
Pioneer	0531, 0014 0150, 0630 0080, 1023
Quasar	0039
RCA	0531, 0054 0346, 0360 0530
Realistic	0195, 0163 0181
Sansui	0189, 0346
Sanyo	0219, 0801
Scott	0163, 0322
Sharp	0186
Sherwood	0491, 0502
Sony	0158, 0168 0474
Soundesign	0670
Teac	0463, 0163

Setup Codes for Tuners:

Technics	0039, 0309 0208
Victor	0074
Wards	0158, 0014 0189, 0080 0054
Yamaha	0176, 0186
Yorx	0195
Zenith	0857

Setup Codes for DVD Players:

Harman/Kardon	0582
JVC	0558
Kenwood	0534
Magnavox	0503
Mitsubishi	0521
Onkyo	0503
Panasonic	0490
Philips	0503, 0539
Pioneer	0525, 0571
Proscan	0522
RCA	0522
Samsung	0573
Sony	0533
Technics	0490
Theta Digital	0571
Toshiba	0503
Yamaha	0490, 0545
Zenith	0503, 0591

CODE TABLE

Setup Codes for Cassette Players:

Aiwa	0029, 0197
Carver	0029
Denon	0076
Harman/Kardon	0182, 0029
JVC	0244, 0273
Kenwood	0070
Magnavox	0029
Marantz	0029
Onkyo	0135, 0282
Optimus	0027, 0220
Panasonic	0229
Philips	0029
Pioneer	0027, 0220
	0099
Sansui	0029
Sony	0243, 0170
	0291
Technics	0229
Victor	0273
Wards	0027
Yamaha	0097, 0094

Setup Codes for Home Automation:

GE	0240
Lutron	0597
One For All	0167
Radio Shack	0240
Security System	0167
Universal X10	0167
X10	0167

Setup Codes for Misc. Audio:

Aiwa	0010, 0159
	0404
Fisher	0052
Harman/Kardon	0477
JBL	0477
JVC	0073
Jerrold	0459, 0520
RCA	0056
Scientific Atlanta	0460
Sony	0010, 0159
Starcom	0459

Setup Codes for LD Players:

Denon	0059
Mitsubishi	0059
NAD	0059
Pioneer	0059
Sony	0193, 0201