

## sx-AOT off delay timer setup method:



No bridge: 10 minutes.  
1-2 bridge: 20 minutes.  
2-3 bridge: 30 minutes.

There is a bridge put on pin3, Customer can use it to bridge 1-2 or 2-3 to get 20 minutes or 30 minutes. If no bridge it's default value - 10 minutes.

Note: Power off the sx-AOT before you change the bridge setting.

After you press the button, the output turns on, after 10/20/30 minutes the output will turn off. If you want to turn off earlier than 10/20/30 minutes, press the button which will turn off immediately.